



# EXPANSION EXPLORER

## Owner's Manual



### Information

- The software and this Owner's Manual are exclusive copyrights of Yamaha Corporation.
- Copying of the software or reproduction of this manual in whole or in part by any means is expressly forbidden without the written consent of the manufacturer.
- Yamaha makes no representations or warranties with regard to the use of the software and documentation and cannot be held responsible for the results of the use of this manual and the software.
- Windows is a registered trademark of Microsoft® Corporation in the United States and other countries.
- Apple, Mac, Macintosh, iPad, and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.
- IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.
- Android and Google Play are trademarks of Google LLC.
- Wi-Fi and Wi-Fi CERTIFIED are registered trademarks or trademarks of Wi-Fi Alliance®.
- The company names and product names in this Owner's Manual are the trademarks or registered trademarks of their respective companies.
- The licenses to use within this software are described in "OPEN SOURCE LICENSE" in the MENU display of this app.

## About this manual

- "NOTICE" messages in this Manual contain information that we ask you to follow in order to avoid the possibility of malfunction/damage to the product, damage to data, or damage to other property.
- "NOTE" messages in this Guide contain instructions and additional information that might be helpful.
- This Owner's Manual assumes that you are already familiar with basic operations on each operation system (Windows/Mac/Android/iOS). If you are not, please refer to the owner's manual of each operations system before using this application.
- The screen displays as illustrated in this Owner's Manual are for instructional purposes.
- Although the screen displays shown are based on a certain version for a certain OS, basic operations for this app are the same for any OS.

# Introduction

EXPANSION EXPLORER (this app) enables you to intuitively install expansion contents (Voices, Styles, Multi Pad content, Songs) to compatible Yamaha arranger workstation keyboards. This allows you to play in a wider variety of genres and get greater enjoyment from your instrument, by using additional expansion content provided by Yamaha.

You can also search for content that matches the song you want to play from all the content (including preset content) in the connected instrument.


## **NOTICE: About Conflict with the Yamaha Expansion Manager App**

**The data installed on the instrument from EXPANSION EXPLORER and from Yamaha Expansion Manager cannot coexist. Only data installed later from one of the apps will be valid.**

- If you perform a new installation using the Yamaha Expansion Manager, any expansion content installed from this app will be deleted from the instrument.
- If you perform a new installation using this app, any Expansion Packs installed using the Yamaha Expansion Manager will be deleted from the instrument.

# What you can do with this app

- Search for and listen to Yamaha's expansion contents (Voices/Styles/Multi Pads/Songs).
- Search for and listen to contents (preset) of your instrument connected to this app.
- Install expansion contents to your instrument, with a minimum of one file. It is not necessary to install an entire pack at one time; also, additional content can be installed later.
- Analyze an audio file to find suitable content (preset and expansion) for recreating that song by playing the keyboard.
- Import and install your original or third-party made expansion content (Voice/Style/Multi Pad/Song) to the instrument. (Windows/Mac version only.)
- Check the remaining capacity of the instrument.
- Check and edit the content of the Registration Memory Bank files and Playlist files in the connected instrument.

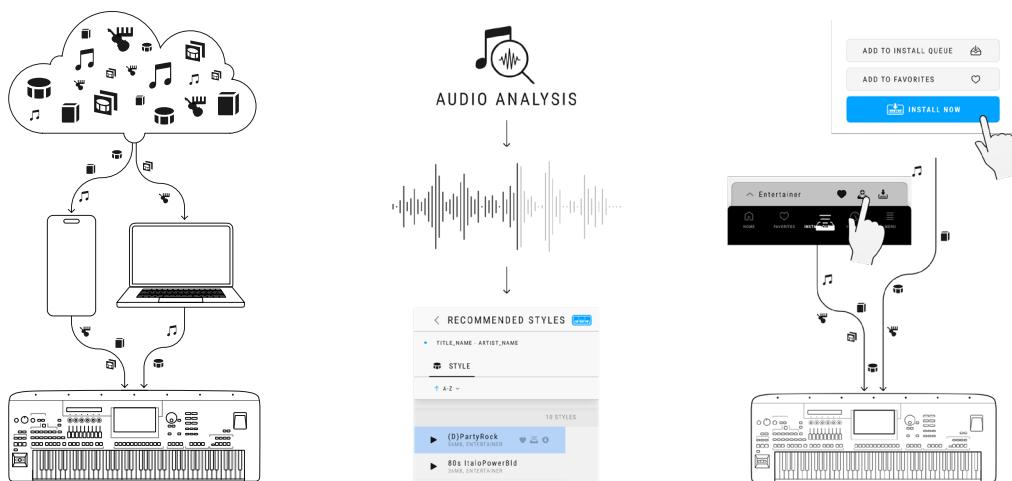

## NOTE

Some instruments come with pre-installed Expansion content. This content will be removed when you install the content from EXPANSION EXPLORER for the first time. However, you can reinstall parts of the pre-installed content as you need, using EXPANSION EXPLORER.

# What you CANNOT do with this app

The following cannot be done with this app. In these cases, please use Yamaha Expansion Manager.

- Create your original expansion content.

# Compatible Instruments & Devices

This section explains compatible instruments and devices for the app (as of 2025/01/20).

For the latest information, please refer to the official app website via the link below:

[https://manual.yamaha.com/mi/rt/expansion\\_explorer/website/](https://manual.yamaha.com/mi/rt/expansion_explorer/website/)

## Compatible instruments

- PSR-SX920 (firmware version 1.20 or later)
- PSR-SX720 (firmware version 1.20 or later)
- Genos2 (firmware version 1.30 or later)
- PSR-A5000 (firmware version 1.40 or later)

## Operation systems compatible with this app

- Windows
- macOS
- iOS, iPadOS
- Android

# Quick Guide

This section explains the main usage of this app.

## Find and install desired content

You can find suitable expansion content for the song you want to play, and then install it on your instrument.

**1.** Connect to your instrument, and then make initial settings on the app.

⇒ [Setting Up](#)

**2.** Search for and listen to the desired expansion content.

⇒ [EXPLORE display](#)

**3.** Install the desired expansion content

There are two ways to install.

- **Installing a single portion of content at a time**

3-1. Click/tap on  in the [detail display](#) of each content.

- **Installing multiple content together**

3-1. Click/tap on  in the [detail display](#) of each content.

The content is added to an "install queue."

3-2. Click/tap on  in the [INSTALL QUEUE display](#).

All contents in the queue will be installed to your instrument. After the installation is complete, the queue will be empty.


### NOTICE

- **When using this app on a smart device, do not put the app into the background while installing content on your device until the completion notification is displayed, as this may cause the installation to fail.**

## NOTE

- The time it takes to install varies depending on the size of the content you are installing. (Reference: several minutes to about 20 minutes per content)

4. Installation is complete! Play your instrument using the newly installed content.

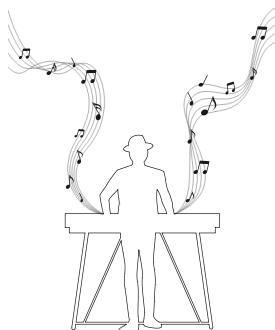

## Explore expansion content without an instrument (DEMO mode)

You can search for and listen to expansion content even if you don't have a compatible instrument handy.

1. Enable the DEMO mode.

⇒ [First-time setup](#)

⇒ [MENU display](#)

2. Search for and listen to the desired expansion content.

⇒ [EXPLORE display](#)

# Setting Up

This section describes preparations you need to make before using the app.

- An internet connection is required.
- For iPhone/iPad and Android apps, you must first confirm some permissions (see below).


## Connecting to the instrument

This section explains how to connect the device and the instrument to each other. Final connection settings on the app will be done when you launch the app for the first time, or just before installing the content.

### Cable connection via USB


#### For the computer:


Connect the USB terminal (Type A or C) of the computer to the [USB TO HOST] terminal (Type B) of the instrument via a USB cable.

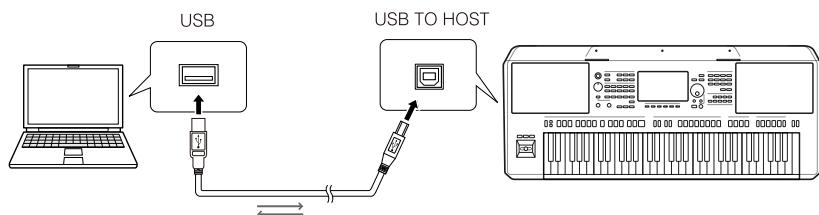

#### For the smart device (iPhone/iPad/Android):

 Connect the smart device to the [USB TO HOST] terminal (Type B) of the instrument via a conversion adapter and USB cable. The diagram below is an example.

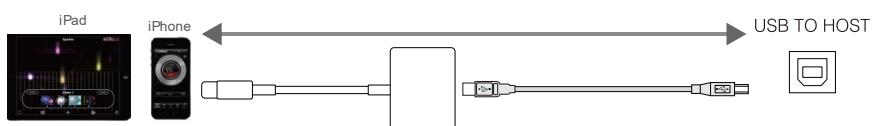




The shape of the connector and the required conversion adapter will vary depending on the device you use. For more details on connections, please refer to the "[Smart Device Connection Manual](#)" on the website.

## Wireless LAN connection

Connect the computer/smart device and the instrument to the same access point (within the same LAN) via wireless LAN connection.

Connect the instrument to the access point using Infrastructure mode.

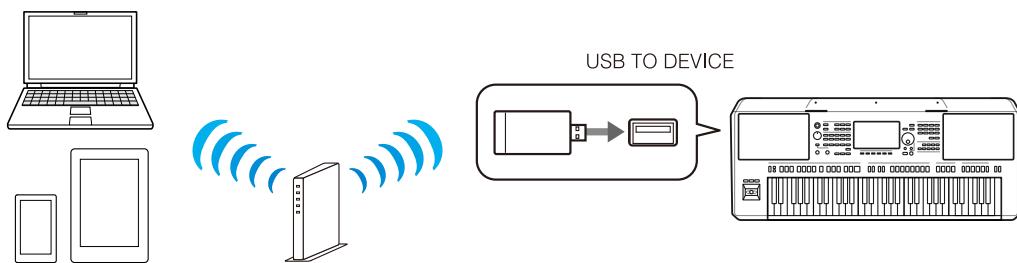

### NOTE

- Both your computer/smart device and your instrument must be connected to the Wireless LAN access point using the 2.4 GHz band.
- You may need the Wireless LAN Adaptor UD-WL01 (sold separately) to use a Wireless LAN connection with the instrument. For details, please refer to the owner's manual for your particular instrument.

## Confirming permissions (for smart devices)

To use this app, the following permissions are required. When a permission request is displayed on your smart device when you start the app, make sure to allow it.

- Accessing media (audio, video, etc.) in the device
- Using the network


# Settings for when the app is first launched

When you start the app for the first time, configure the following settings in order.

## Select your country/region

Select your country or region. This allows Yamaha to provide ideally appropriate expansion content for your region.

## Connecting an instrument

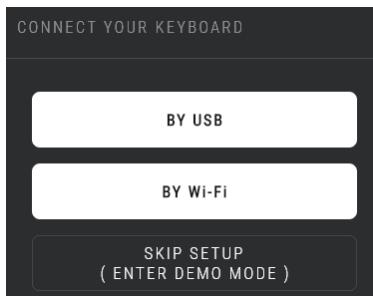


- **[BY USB]:** Connects to the instrument via a cable connection.
- **[BY Wi-Fi]:** Connects to the instrument via a wireless LAN connection.
- **[SKIP SETUP]:** Does not connect to an instrument and enters demo mode.

If you select [BY USB] or [BY Wi-Fi], connection instructions are displayed.

Click/tap [NEXT] to proceed.

When a compatible instrument is found, the name of the instrument will be displayed.

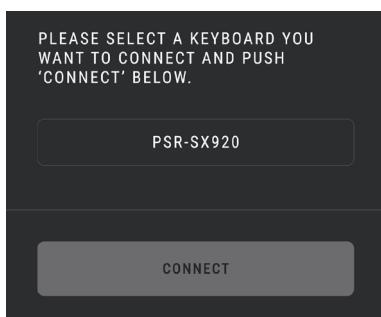


Select the instrument, and then click/tap [CONNECT] to confirm.

A message appears indicating the connection is complete.

## NOTE


If the app is having trouble finding your instrument, see [Troubleshooting](#).

## Select categories that interest you

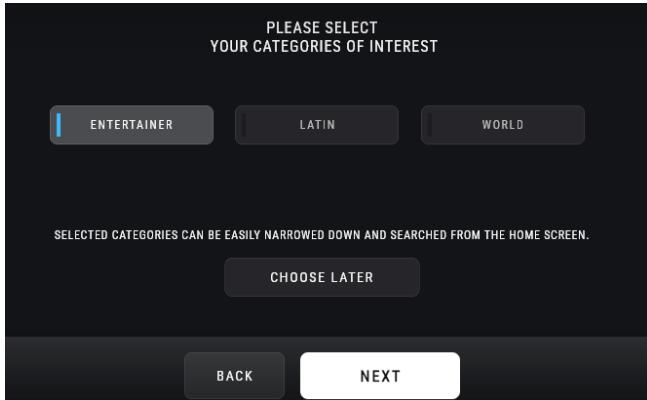

Turn on the categories you want to display as a filter option on the EXPLORE display.  
Tap/click [NEXT] or [CHOOSE LATER] to proceed to the next step.

## Select the countries and regions you are interested in

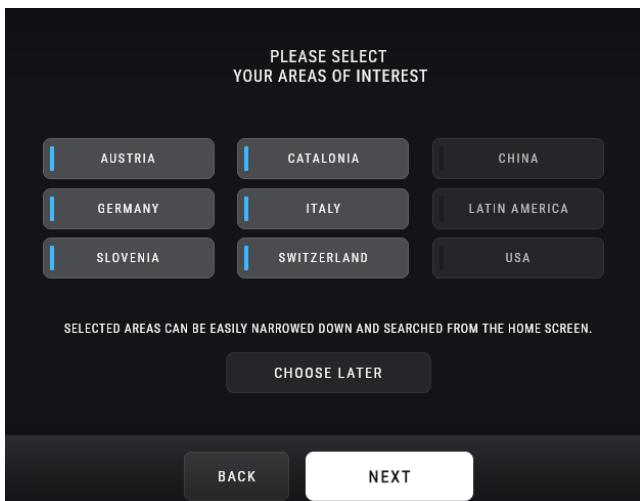

Turn on the areas you want to display as a filter option on the EXPLORE display.  
Tap/click [NEXT] or [CHOOSE LATER] to proceed to the next step.

This completes the settings for the first time launch of the app.

### NOTE

- This series of first-time settings can be called up again by selecting [INTRODUCTION] on the [MENU display](#).
- The items you set initially can be changed on the [MENU display](#).
- The instrument to be connected can be changed on the [MY KEYBOARDS display](#).

# Displays (Overview)

## Differences in screen layout for each device

This section explains the screen differences for various devices (Windows, Mac, iPad, iPhone, Android).

- The positions of icons are different, but the operations and functions are the same on each display.
- iPhone and Android are set to portrait orientation. The menu bar is at the bottom.
- Computers (Windows, Mac) are landscape orientation. Also, iPad is also fixed to the same landscape orientation as computers. The menu bar is at the top.

iPhone/Android



Windows/Mac




# Basic operations

This section explains the basic operations for the displays.

## Selecting each main function - LAUNCHER

- Click/tap the area as shown below on the LAUNCHER display to switch among these main function displays.

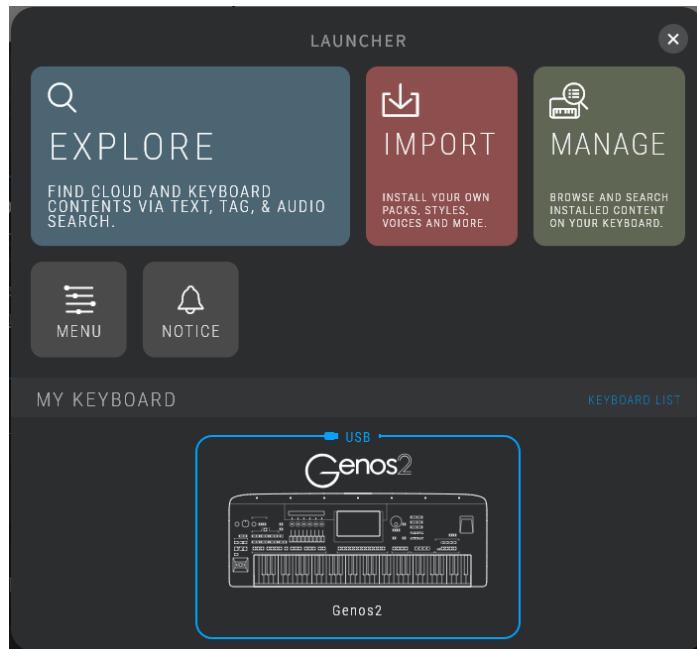

### Main functions:

- [EXPLORE](#) / [IMPORT](#)(\*) / [MANAGE](#)
- [MENU](#) / [NOTICE \(NOTIFICATION\)](#)
- [KEYBOARD LIST](#)

\* IMPORT is available only for Windows/Mac versions.


- To return to the LAUNCHER display from each display, click/tap the LAUNCHER icon.



- **iPhone/Android:** Tap the  icon floating on the screen.
- **Windows/Mac:** Click the  icon on the left of top menu bar.

## Changing pages in each display

- Click/tap the icon in the center of the menu bar to switch pages within each display.

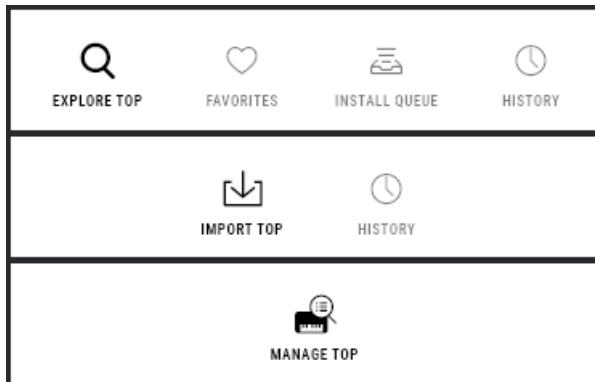

TOP of each function / [FAVORITES](#) / [INSTALL QUEUE](#) / [HISTORY](#)

- (Windows/Mac version only) Click/tap the appropriate icons below on the EXPLORE display to call up the relevant pop-up window. Press the same icon again to close it.



- Click/tap the icon below on the EXPLORE display to access the function.



## Changing the main function within each main function

- The icons on the top left and right of the screen will call up the following displays regardless of the current display.



## Closing the display

You can close the active display by one of the following operations. The operations for each display differ depending on the OS and display.

- Click/tap the same icon again that called up the display


- Click/tap the  icon

- Click/tap the  (cancel) icon

- Perform the "return" operation on a smart device.

## Preview the content

Tap/click the  icon on the search results display or "PREVIEW" on the detailed information display to play a preview of the content.

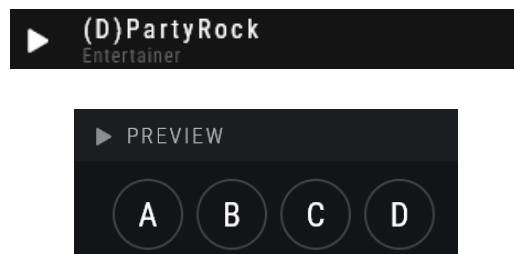


### NOTE

If you are using Genos2 via a USB connection, the preview sound will be played as audio input to Genos2. So, monitor the preview sound using headphones/speakers connected to Genos2.

# Displays (Detail)

## EXPLORE


This display lets you search for preset content and available expansion content for your instrument.

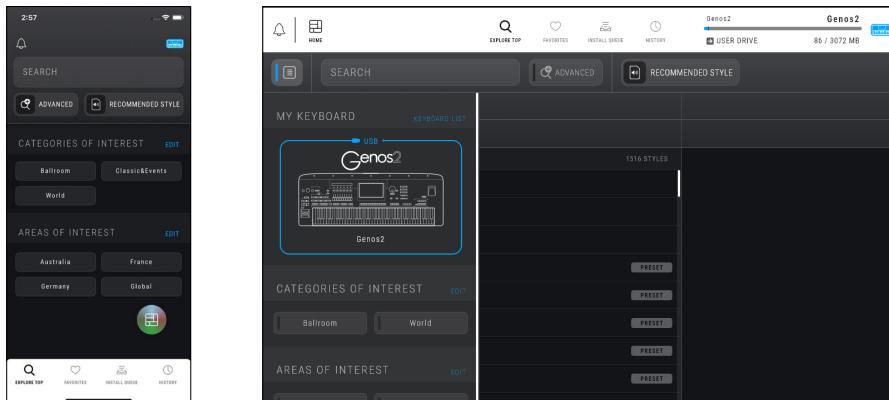

⇒ [NOTIFICATION display](#)



 
⇒ Instrument capacity usage indication, [MANAGE display](#)



⇒ [search result display](#) from word entry



 For the computer/iPad version, this turns the pop-up window on/off.  
(This window is the same as the EXPLORE display on the smart device version.)




⇒ [Advanced search display](#)



⇒ [Style recommendation function](#)

On the smart device version of the EXPLORE display, the following are available:

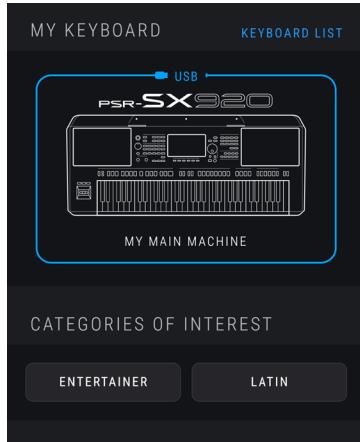


- **MY KEYBOARD:** For checking the connection status with the instrument, and opening the [KEYBOARD LIST display](#)
- **CATEGORIES OF INTEREST:** For filtering contents by selected category
- **AREAS OF INTEREST:** For filtering contents by selected area

While a connection to the instrument is active, a blue line surrounds the instrument illustration, and the connection type is shown.

## Search results/detailed information

You can preview each content, register it as a favorite, and install/remove it from the instrument.

For the computer/iPad version, these are displayed on the EXPLORE screen.

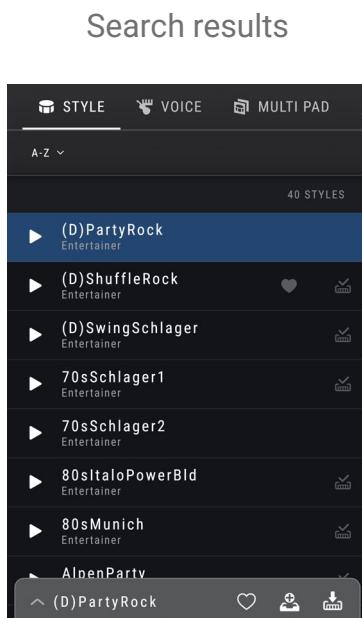


Selecting a content name calls up the detailed information display.

- **Smart Device version:** A menu for calling up the display or other operations is shown at the bottom.
- **Computer/iPad version:** The detailed information display is shown directly on the right.

	Plays the selected preview
	Calls up the detailed information display
	For adding/removing content to/from the FAVORITES list
	For adding/removing content to/from the INSTALL QUEUE
	Immediately installs/removes the content on your instrument
	Enable the content on the instrument (for preset content only)

## Detailed information

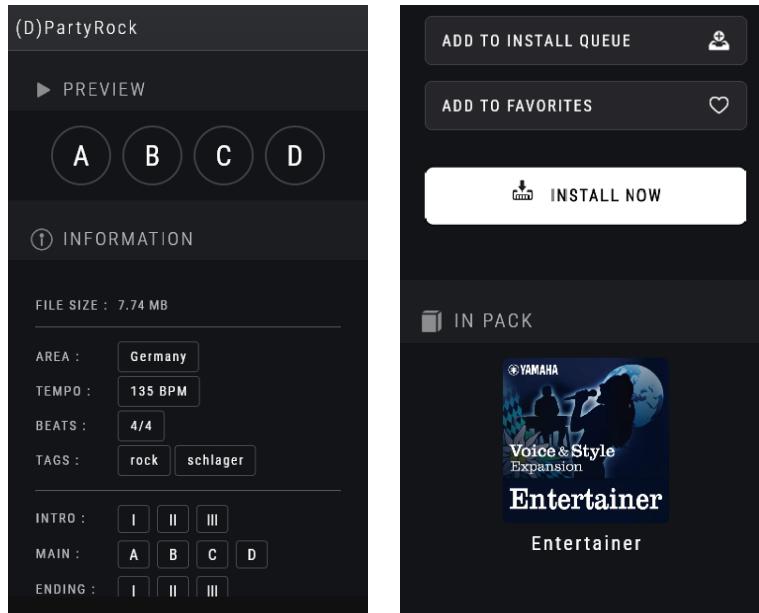

For playing each preview

Indicates content information (indication only)

For adding/removing content to/from the INSTALL QUEUE

For adding/removing content to/from the FAVORITES list


Immediately installs/removes the content on your instrument

Enable the content on the instrument  
(for preset content only)

Displays information about the pack that contains the content

## ADVANCED SEARCH

You can add various conditions to refine your search.

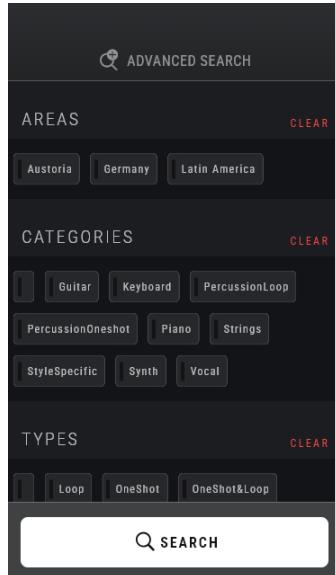

**Each element (AREAS, CATEGORIES, etc.):** Specify the filtering conditions.

**INCLUDED** Set whether the content that meets the condition is shown in results or not.

- **FAVORITES:** Already added to FAVORITES
- **INSTALLED:** Already installed to the instrument

**SEARCH**


Perform a search using keywords and specified conditions.

### NOTE

If you search by just entering the text input field instead of tapping/clicking [SEARCH] above, the search will not apply the advanced conditions, even if the advanced search display is shown.

## RECOMMENDED STYLE

This function analyzes an audio file and lists expansion Styles suitable for playing that music.

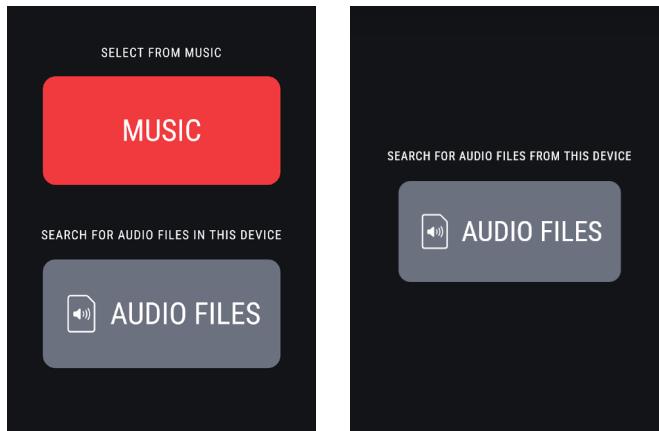

MUSIC

(iPhone/iPad version only)

For selecting an audio file from the "Music Library" of this iPhone/iPad and having it analyzed.

AUDIO FILES

(common to all versions)

For selecting an audio file on your device and having it analyzed.

Supported formats:

- WAV, MP3, AAC (Android/iPhone/iPad/Mac/Windows)

After tapping/clicking the icon and selecting an audio file, analysis starts.

When the analysis is complete, the search results display is shown with a list of recommended content. You can use it in the same way as [regular search results](#).


## FAVORITES

You can easily access favorite content that you intend to repeatedly use, by adding them to this list from the search results display.

STYLE	VOICE	MULTI PAD	SONG
A-Z ▾			
3 STYLES			
▶ (D)ShuffleRock	Entertainer		
▶ 70sSchlager2	Entertainer		
▶ 80sItaloPowerB1d	Entertainer		Cloud

## INSTALL QUEUE

This allows you to collect the content added to the INSTALL QUEUE list from the search results display and install it to your instrument all at once.

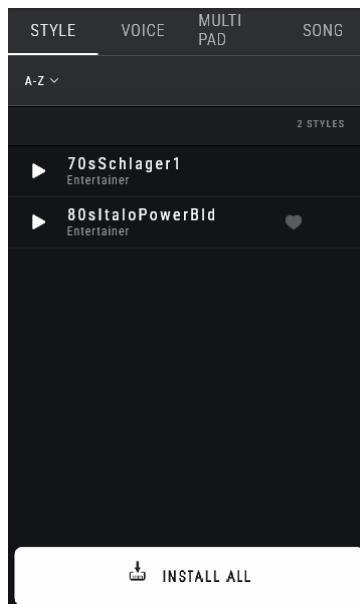

⬇️ INSTALL ALL

Install all the content in the list to your instrument at once.

### NOTE

When the installation is complete, the INSTALL QUEUE list becomes empty.

## HISTORY

You can check your installation history and preview play history.

Also, you can delete the installed content from the instrument.


 **DELETE**

Delete (uninstall) the content from the instrument.

# IMPORT

(Only for Windows/Mac versions)

You can import and install your original or third-party expansion content (Voice/Style/Multi Pad/Song) to the instrument. A wide variety of file types can be imported, including Expansion Packs (.ppf/.cpf), MIDI Songs (.mid), audio files (.wav/.mp3), Styles (.sty), Multi Pads (.pad), etc.

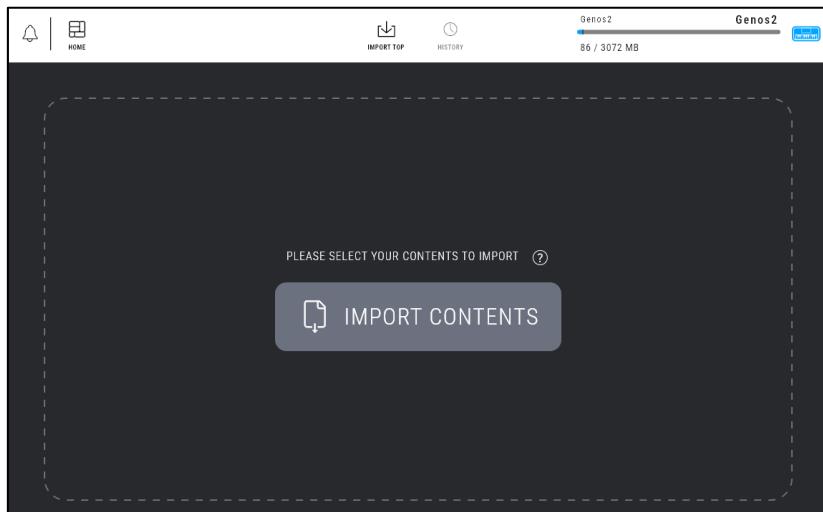

For a complete list of supported file types, click the  icon.

To import the desired file, click the  and select the desired file, or drag and drop the file into the app window. Then, select the imported content and install same as other expansion content.



Call up the list of available file types which can be imported



 IMPORT CONTENTS

Call up the file select window for importing files

## NOTE

If you import the same file multiple times, each import will be treated as a separate file.

## HISTORY (IMPORT)

You can check your installation history of imported files.

Also, you can delete the installed content from the instrument.

 **DELETE**


Delete (uninstall) the content from the instrument.

# MANAGE (USER DRIVE)

Shows the contents of the User drive of the connected instrument.

You can also view and remove expansion content that has already been installed.

Registration Bank files and Playlist files can be edited.

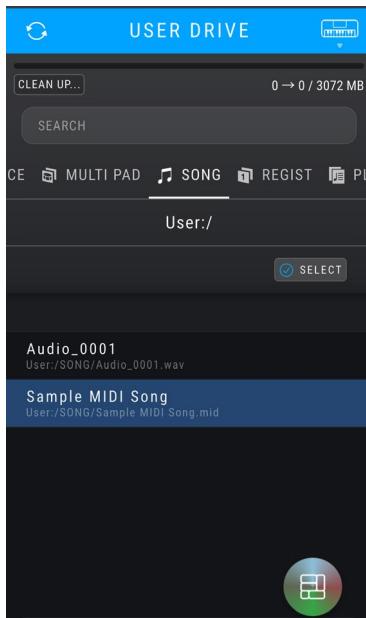

Removes the corresponding content from your instrument.



Performs cleanup of the waveform memory.

If you simply REMOVE a Voice, the waveform capacity for that Voice remains in use. This is unavoidable due to the way Voices work. However, by running CLEAN UP, you can remove unused waveforms from any Voice and maintain an optimum amount of free space for expansion Voices.




Enables the Registration Bank on the instrument (for Registration Banks only)

Editable content for Registration Bank and Playlist files:

- **Registration Bank:** Bank name, memory name, memory order
- **Playlist:** Playlist name, record name, record order

# MENU

You can change various settings, view the instruction manual, view the license information and check the software and firmware versions.

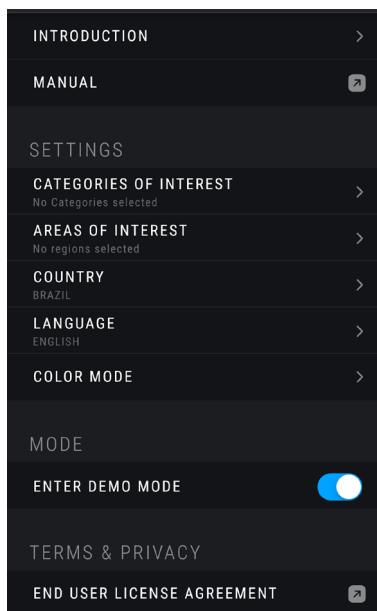

	INTRODUCTION	Calls up the initial setup sequence that runs when this app is launched for the first time.
	MANUAL	Calls up the Owner's Manual (this manual).
SETTINGS	CATEGORIES OF INTEREST	For setting categories which you want to display as a filter option on the EXPLORE display.
	AREAS OF INTEREST	For setting areas which you want to display as a filter option on the EXPLORE display.
	COUNTRY	For setting your own country or region. This allows Yamaha to provide ideally appropriate expansion content for your region.
	LANGUAGE	For setting the display language for this app.
	COLOR MODE	Switches the color tone mode between dark and light.
	RESET SETTINGS	Clear all app settings (history, favorites, keyboard list) and app cache.
MODE	ENTER DEMO MODE	Switches between normal mode and demo mode.
TERMS & PRIVACY	END USER LICENSE AGREEMENT	Calls up the user license (web page) that you agreed to when you started using this app.

	PRIVACY	Calls up the privacy policy of this app (web page).  You can also turn on/off whether to allow sending anonymous usage data to help improving this service from this item.
ABOUT	OPEN SOURCE LICENSE	Displays information about the software licenses used in this app.
	APP VERSION	Displays the version of this app.
	FIRMWARE VERSION	Displays the firmware version of the currently connected instrument.

# Other displays


## NOTIFICATION

Notifications from Yamaha are displayed.

## KEYBOARD LIST (MY KEYBOARDS)

Currently connected instrument and other registered ones are displayed.

You can switch instrument connection, delete registered keyboards, or add new one.

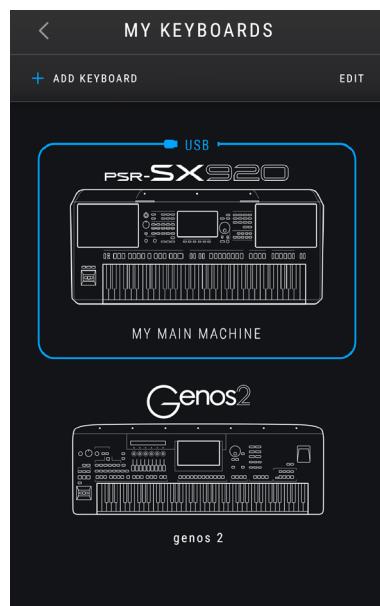

**ADD KEYBOARD**

Add a new instrument.

**EDIT**

Calls up the list editing display where you can delete registered instruments.

**Instrument illustration:** Switches to the connection for that instrument.

# Installation Destination for Each Content

This section explains where the expansion content you install from this app will be placed within the instrument.

Content type	Install destination	Folder name
Style	User tab > User category	「STYLE_INSTALL_NOW」、「STYLE_<name>」
Voice	User tab > Expansion category	「VOICE_INSTALL_NOW」、「INCLUDED_VOICES」、「VOICE_<name>」
Multi Pad	User tab > User category	「MULTIPAD_INSTALL_NOW」、「MULTIPAD_<name>」
Song	User tab > User category	「SONG_INSTALL_NOW」、「SONG_<name>」

*<name>*: This refers to the character string you determined when installing from the INSTALL QUEUE. The default value is the date of the installation.

# Troubleshooting

Problem	Possible cause	Solution
Cannot connect to the desired instrument on the MY KEYBOARD display, or the app cannot find the instrument when you try to connect via wireless LAN.	<p>Some communication error has occurred.</p> <ul style="list-style-type: none"> <li>Some of the devices and instruments are connected via a wireless LAN other than 2.4 GHz.</li> <li>Not all devices/instruments are connected to the same LAN access point.</li> </ul>	<p>Restart both the app and your instrument, and then try connecting again.</p> <p>Connect both the instrument and the device to the same wireless LAN access point (same SSID) via the 2.4 GHz communication band.</p>
Cannot install content on the desired instrument.	<p>There is not enough free space on the instrument.</p>	<p>Remove unnecessary content to free up memory space.</p> <p><b>NOTE</b></p> <ul style="list-style-type: none"> <li>The waveform capacity will remain in use if you simply remove a Voice. Execute CLEAN UP on the USER DRIVE display to properly free up memory capacity.</li> <li>The INCLUDED_VOICES folder of VOICE may contain Voices that were automatically installed when you installed the Style but are no longer used because the Style has already been removed.</li> </ul>
When playing a preview, there is no sound from the device.	<p>The volume setting on the device is 0.</p>	<p>Adjust the volume on your device.</p>

© 2024 Yamaha Corporation  
Published 01/2026  
YJ-D0