

Setting Up for Connection with Smart Pianist

To use Smart Pianist, you will need to connect it to a compatible instrument. The connection method differs depending on your instrument and smart device. Follow the steps below to confirm your relevant Connection Types and what items are necessary.

1. Select your instrument and smart device from the list below, and then press [Display].

Instrument:

Smart Device:

2. Choose the most appropriate one from the Connection Types shown below, and then read the corresponding instructions to prepare the necessary items.
3. Return to the Smart Pianist app, and then follow the instructions of the Connection Wizard to complete the connection.

◆ Connection Types

[Instrument] iPad terminal / [Device] Lightning connector

Items required:

- Apple Lightning to USB Cable



[Instrument] USB TO HOST (Type B) terminal / [Device] Lightning connector

Items required:

- USB cable (Type A plug - Type B plug)



- Apple Lightning to USB Camera Adapter



 
[Instrument] USB TO HOST (Type B) terminal / [Device] Type C connector

Items required:

- USB cable (Type A plug - Type B plug)



- USB conversion adaptor (Type A socket - Type C plug)



* When connecting an iPadOS device, use the Apple USB-C Digital AV Multiport Adapter or Apple USB-C VGA Multiport Adapter.

 
[Instrument] USB TO HOST (Type C) terminal / [Device] Lightning connector

Items required:

- USB cable (Type A plug - Type C plug)



- Apple Lightning to USB Camera Adapter



[Instrument] USB-C terminal / [Device] Lightning connector

Items required:

- Apple USB-C to Lightning Cable



* A USB cable (Type C plug - Type C plug, or Type A plug - Type C plug) and a genuine Apple adapter can be used.

[Instrument] USB-C terminal or USB TO HOST (Type C) terminal / [Device] Type C connector

Items required:

 
- USB cable (Type C plug - Type C plug)




Wi-Fi (UD-WL01)

Items required:

- USB wireless LAN adaptor UD-WL01



- Router (access point)

 

* You can connect without a router, however certain functions (such as data management on the online storage and firmware update of the instrument) that require Internet access will be disabled.

* Not available in some countries or regions.

Bluetooth (built into the instrument)

Items required:

None

When connecting by Bluetooth, the Audio

 
Recording function cannot be used on Smart Pianist. If you want to record your keyboard performance as audio to Smart Pianist, connect by another method.

* Not available in some countries or regions.


Bluetooth (UD-BT01)

Items required:

- Wireless MIDI adaptor UD-BT01



- USB power adaptor (Type A)

 

- USB cable (Type A plug - Type B plug)



When connecting by Bluetooth, the Audio Recording function cannot be used on Smart Pianist. If you want to record your keyboard performance as audio to Smart Pianist, connect by another method.

* Not available in some countries or regions.

About this manual

- Apple, iPhone, iPad, Lightning and iPadOS are trademarks of Apple Inc., registered in the U.S. and other countries.
- Android is a trademark of Google LLC.
- USB-C™ is trademark of USB Implementers Forum.
- Wi-Fi is a registered trademark of Wi-Fi Alliance®.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Yamaha Corporation is under license.



- The company names and product names in this manual are the trademarks or registered trademarks of their respective companies.